


LIT-1924375

Repair Parts for Use With VB-3752 Normally Open Steam and Water Valves

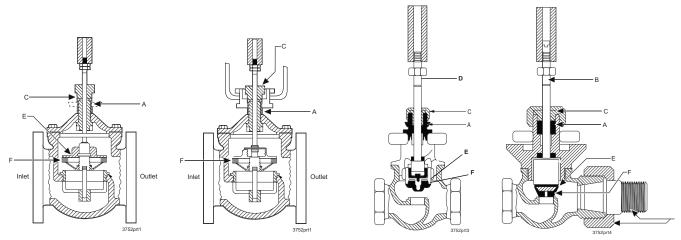

Repair Parts, VB-3752

Description

The available service parts listed in the tables can extend the service life of the VB-3752 Series valves and in many cases return the valve to near original operating performance.

Selection Chart

Repair Parts for use with VB-3752 (Part 1 of 2)

Code Number	Call	Description			
Humber	A	Packing for Use with both Water and Steam			
	^`		Valve Shipping Date		
V-9999-608		1/2 to 1-1/4	All	1/4 in	
		.,, .	,	1/4 III.	
V-9999-608		1-1/2 and 2	After 1-1-68	.,	
V-5460-602		1-1/2 and 2	Before 1-1-68	5/16 in.	
V-5460-602		2-1/2 to 4 (VA-3200)	All	5/16 in.	
V-5280-602		2-1/2 to 8 (VA-3400)	All	1/2 in.	
	В	Union Nut and Male Tailpiece Assembly for Valves with Union Connections:			
		Valve Size (in.)			
V-3752-636		1/2			
V-3752-637		3/4			
V-3752-638		1			
V-3752-639		1-1/4			
	С	Gland Nut			
		Valve Size (in.)	Valve Shipping Date	Actuator	
V-3752-646		1/2 to 1-1/4	All	VA-3200 VA-5000	
V-3752-646		1-1/2 & 2	After 1-1-68	VA-3200 VA-5000	
V-4510-6019		1-1/2 & 2	Before 1-1-68	VA-3200 VA-5000	
V-4510-6019		2-1/2 to 4	All	VA-3200	
V-4510-6020		2-1/2 to 8	All	VA-3400	

Repair Parts for use with VB-3752 (Part 2 of 2)

Code	Call	Description		
Number	out	,		
	D	Stem and Swivel Assembly Includes: Stem, Swivel, and Pins for:		
		Valves Shipped after 3/1/69		
		Globe Valves		
		Valve Size (in.)		
V-3752-6064		1/2		
	Е	Disc Assembly Includes: Disc, Disc Holder, Modulating Plug, and Pin		
		Globe Valves		
		Valve Size (in.)	Cv	
V-3020-6045		1/2	0.9	
V-3020-6047		1/2	1.8	
		Union Angle Valves		
V-3020-6045		1/2	0.9	
V-3020-6047		1/2	2.5	
	F	Disc Only		
			Seat Size (in.)	
V-3020-6021		1/2	3/8	
V-3752-6047		3/4	1/2	
V-3011-6001		1	3/4	
V-3011-6002		1-1/4	1	
V-3020-6006		1-1/2	1-1/4	
V-3020-6007		2	1-1/2	
V-4710-6010		2-1/2	_	
V-4710-6011		3	_	
V-4710-6013		4	_	
V-4710-6014		5	_	
V-4710-6015		6	_	